

Tote Trolley Tray - Double Column



Code: EMTTD

Contents



- 2x Top rails with holes for top shelf attachment
- 2x Bottom rails
- 2x End frames
- 1x Centre frame
- 1x Wooden top shelf
- 12x 40mm M6 bolts
- 4x Casters

Hardware

- | | | |
|---|---|----|
| A |  | 12 |
| B |  | 4 |
| C |  | 1 |

Unpack contents and lay out on the floor

1. Unpack contents and lay out on the floor .
2. Identify the top and bottom cross-rails - the top cross-rails have holes for attaching the top shelf
3. Take the centre runner frame (with runners on both sides). Attach the two bottom cross-rails
4. using bolt A. Do not fully tighten bolts .
5. Attach the two top cross-rails using bolt A. Do not fully tighten bolts.
6. Take the two end frames and attach the cross-rails using 8 x bolt A.
7. Screw the casters B to the bottom of the end frames .
8. Place the wooden shelf (preferred surface facing up) within the recess created by the top of the
9. frame .
10. Fully tighten all bolts. Turn unit upright and insert your selection of our colourful tote trays.

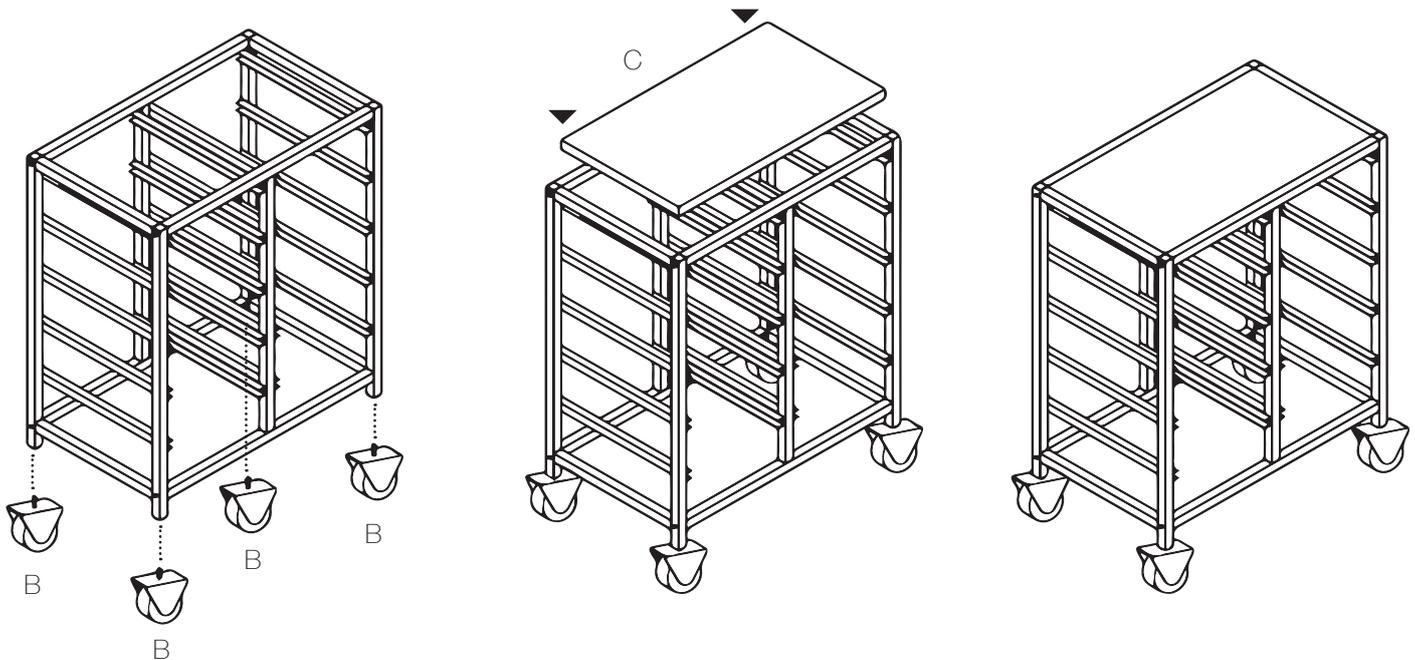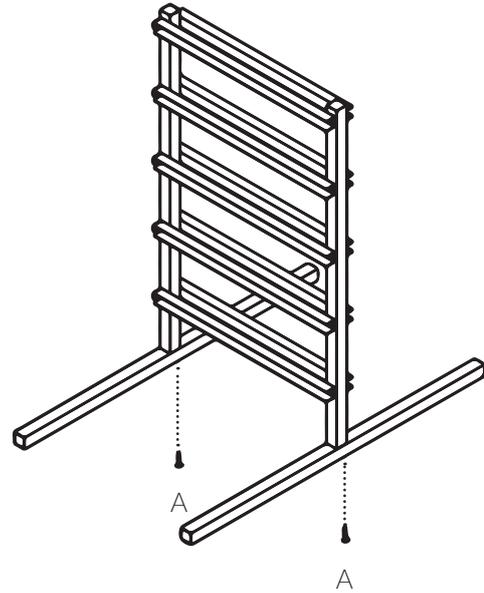

NSW Head Office

5 Liberty Rd,
Huntingwood,
NSW 2148

QLD

17 Moonbi Street
Brendale,
QLD 4500

VIC

U13, 69 Mark Anthony Dr,
Dandenong South
VIC 3175

WA

47 Abbott Road,
Perth Airport
WA 6105

NZ

49 Station Rd,
Papatoetoe, Auckland NZ
2025